



# NORMAL OPERATION

## 1 SINGLE TRACK

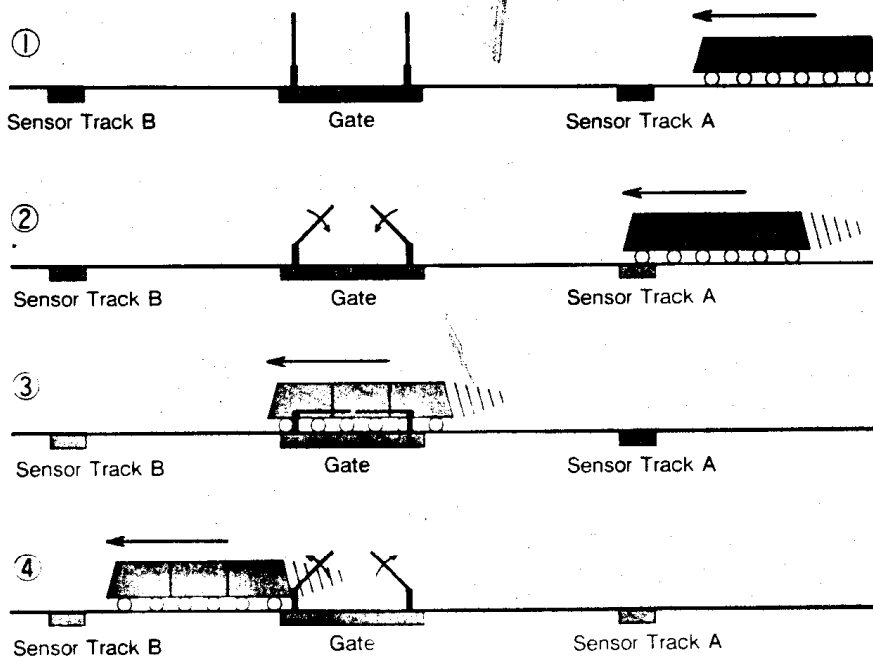

\* The same operating sequence applies when entering across Sensor Track B.

## 2 DOUBLE TRACK

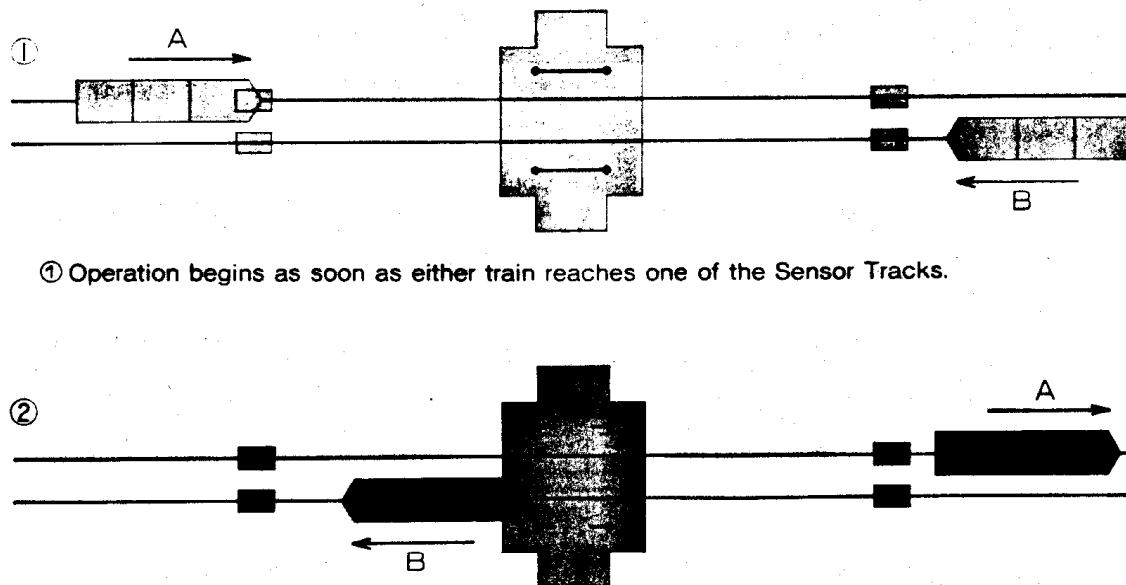

\* If only one train passes through a crossing gate setup for double track operation, the gate will operate as it would in the single track mode.